



# Nikon Coolpix L340 Buttons Replacement

How to replace the buttons on the back of the camera, next to the LCD screen.

Written By: Robert Estrella



## INTRODUCTION

This guide is meant to help the user replace the buttons on the back of the camera after they remove the back panel. This could be to fix a jammed button or simply replace the part as you wish. The only required tool for this process would be a 5mm Phillips Head number #000 screwdriver.

---



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Buttons



- Remove the 5 mm Phillips #000 screw located on the upper left side of the camera
- Remove the 5 mm Phillips #000 screw located on the lower left side of the camera

## Step 2



- Remove the 5 mm Phillips #000 screw from the upper right side of the camera.
- Remove the 5 mm Phillips #000 screw from the lower right side of the camera.



## Step 3




- Remove the 5 mm Phillips #000 screw from the bottom left of the camera.
- Remove the 5 mm Phillips #000 screw from the left-center of the bottom of the camera.
- Remove the 5 mm Phillips #000 screw from the center of the bottom of the camera.

## Step 4



- Remove back cover of the camera.

## Step 5

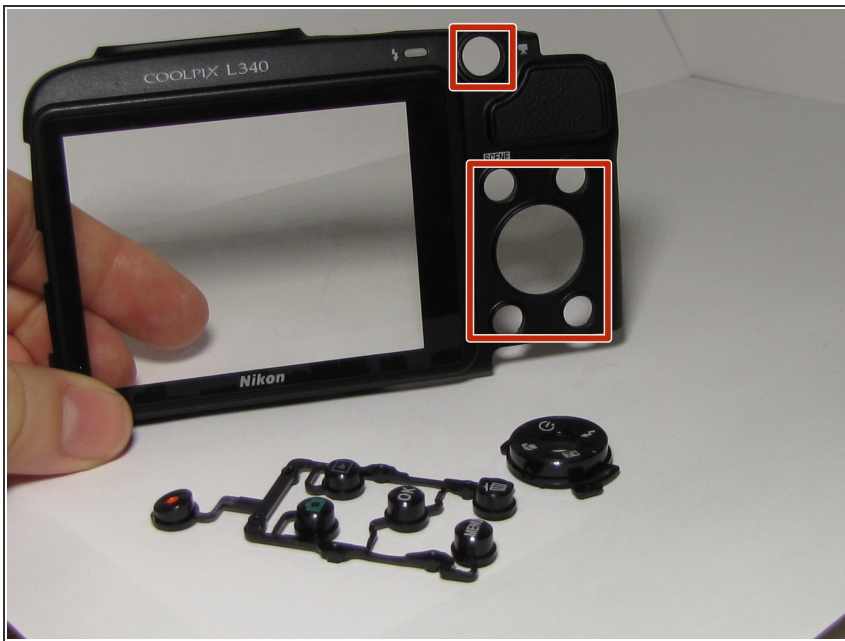

- Push buttons out of the back of the cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-03 09:43:18 PM.